
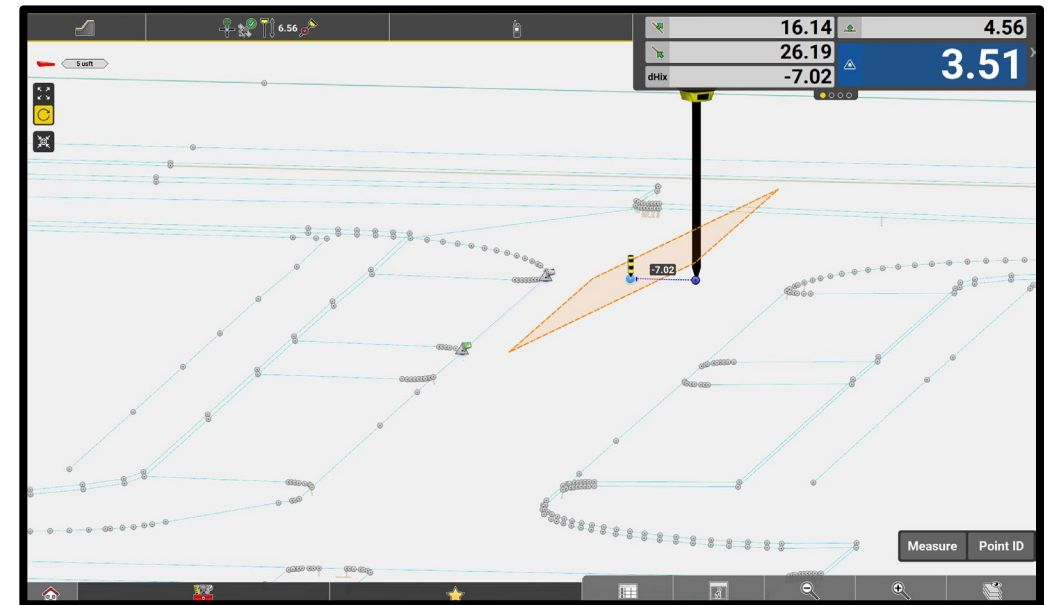


Leica iCON Site Slopes

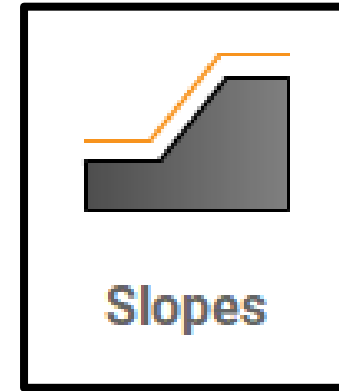


Slopes

- The Slopes app can be used to generate a sloped surface from a line or point

- From the home screen, select the




app

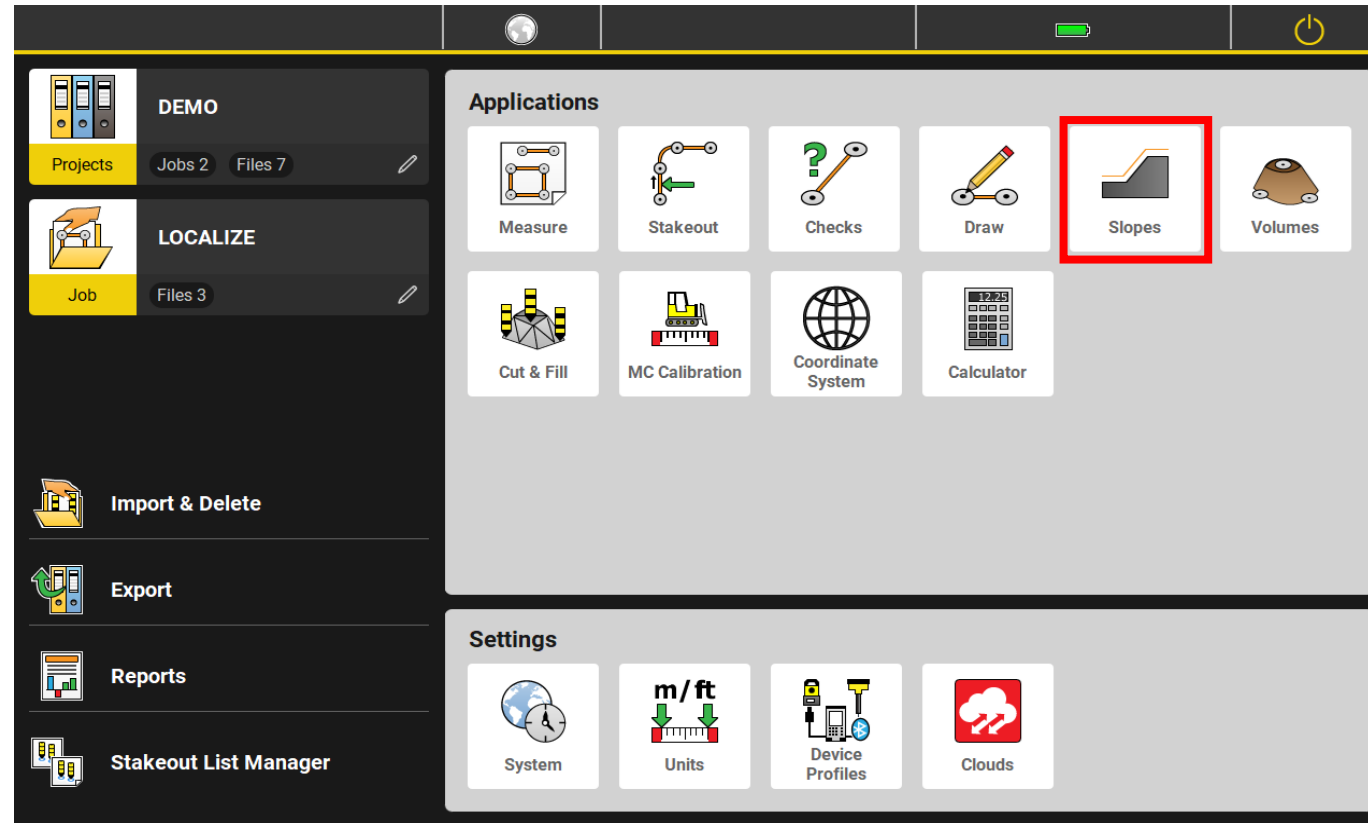



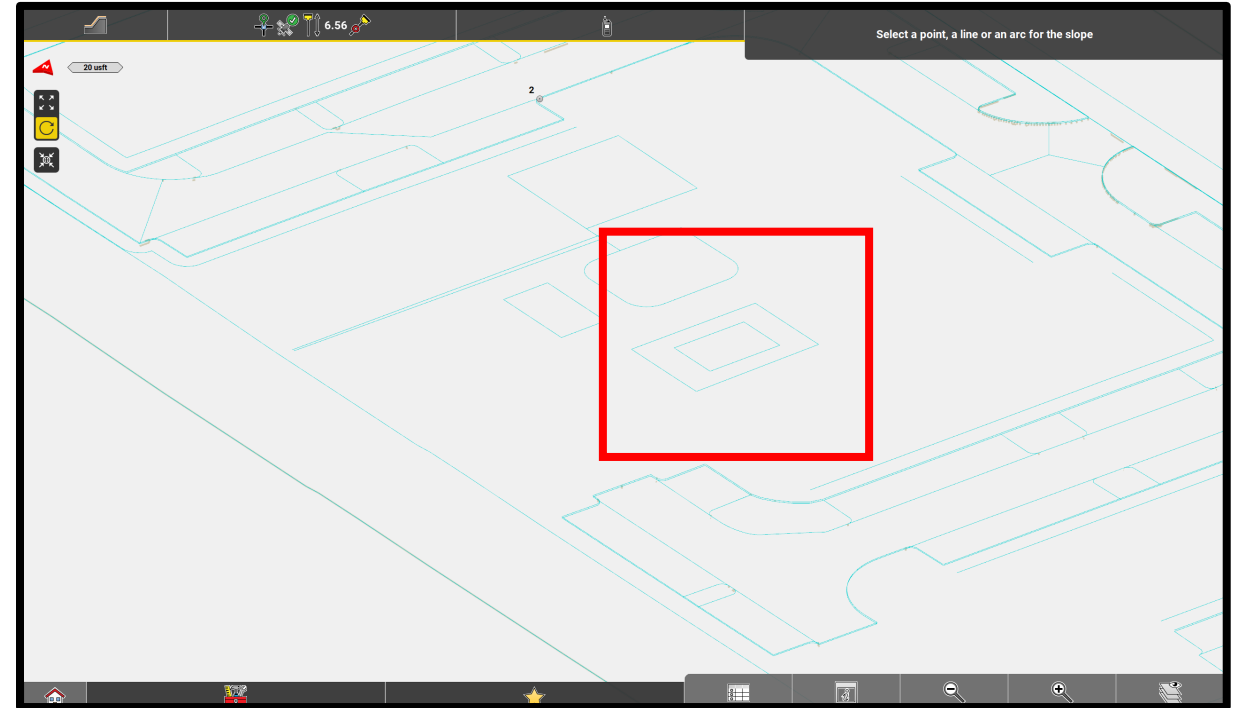


Slopes

- Select the desired point or line to project the slope from







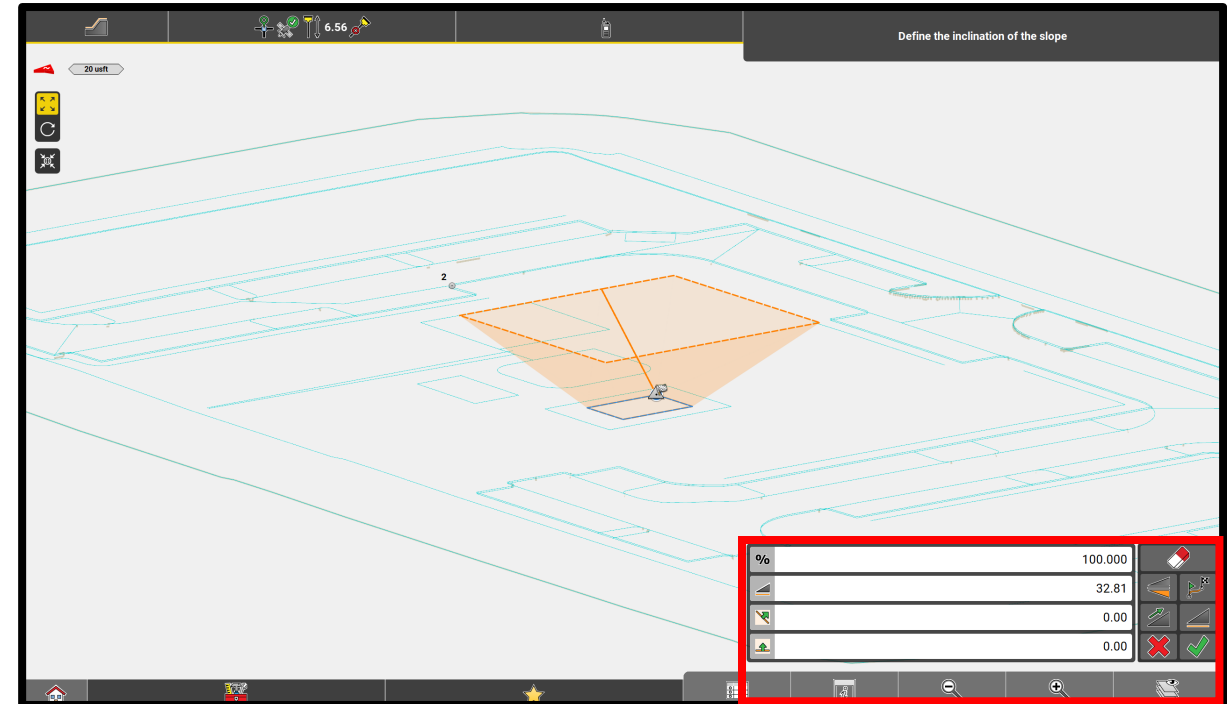










Slopes

- The toolbox will default to these Values
- Enter in the desired values and the orange surface will change respectively
- To rotate view of surface, Press 
- To go back to pan mode, press 
- To Return to original top down view, press  it should change to 




Slopes

-  - Set percent of grade
-  - Distance of slope
-  - Horizontal offset
-  - Vertical offset

	100.000	
	32.81	 
	0.00	 
	0.00	 




Slopes


- To change  percent to Ratio:



- Go to home screen

- Press 

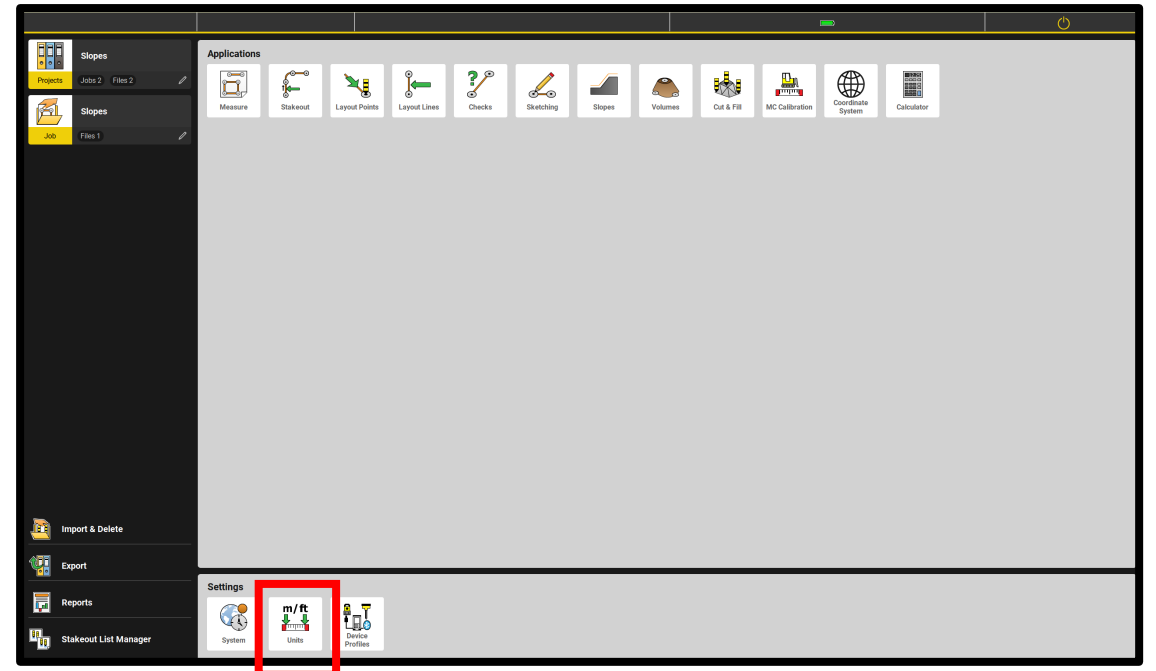





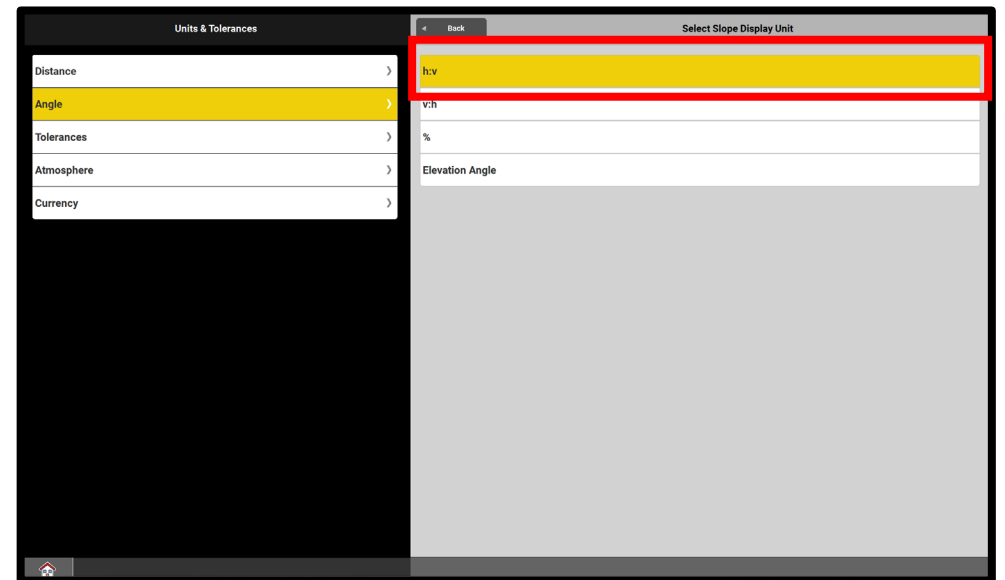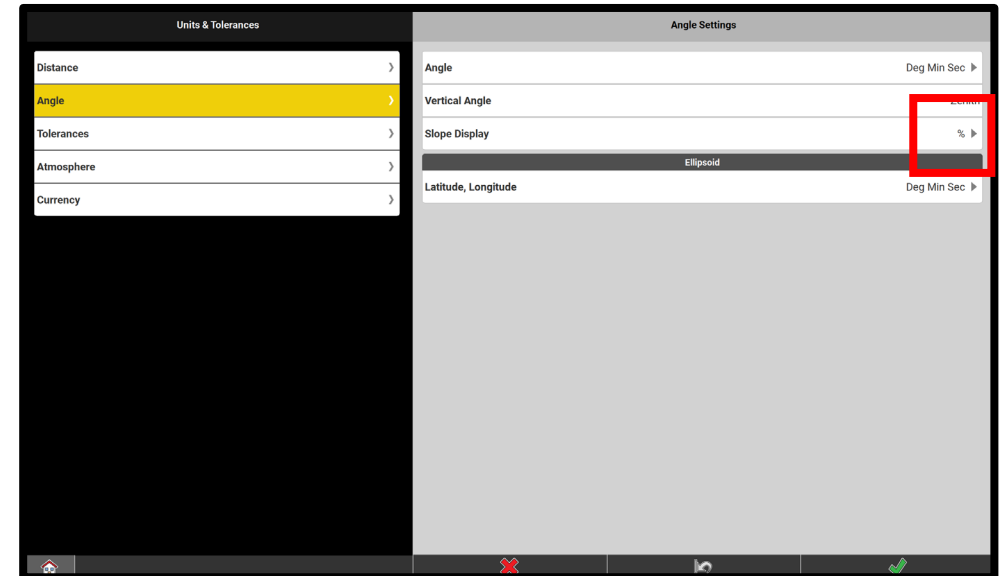


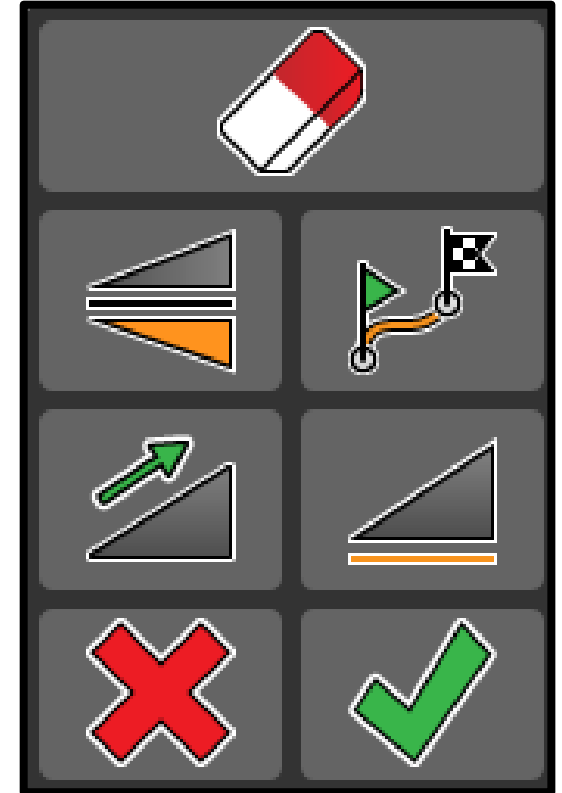
Slopes

- Press Angle
- Press Slope Display
- Press H:V
- Press 





Slopes

-  - Reset to defaults
-  - Swap slope direction between left and right
-  - Swap start and end point of the reference line
-  - Swap slope direction between up to down
-  - Toggle between horizontal and vertical slope distance
-  - Exit slope settings
-  - Apply slope settings







Slopes

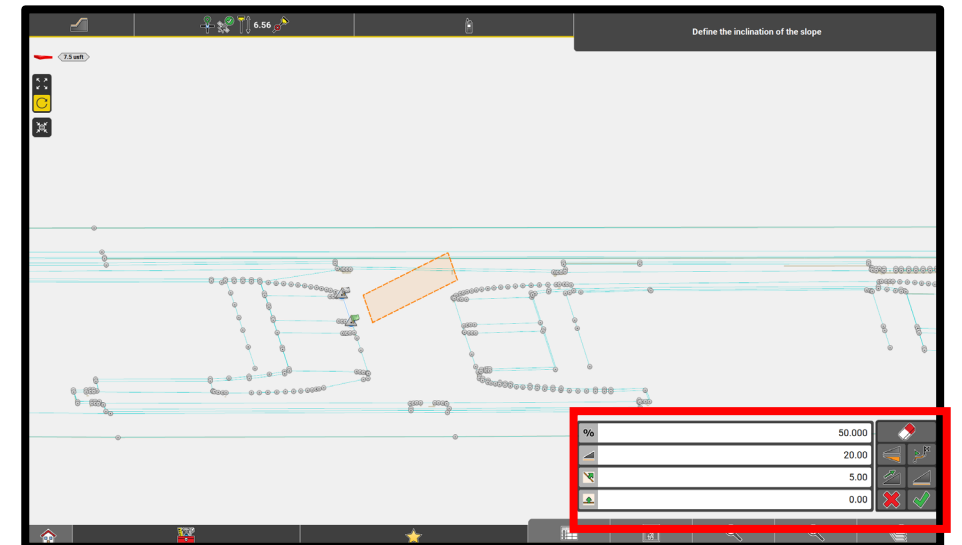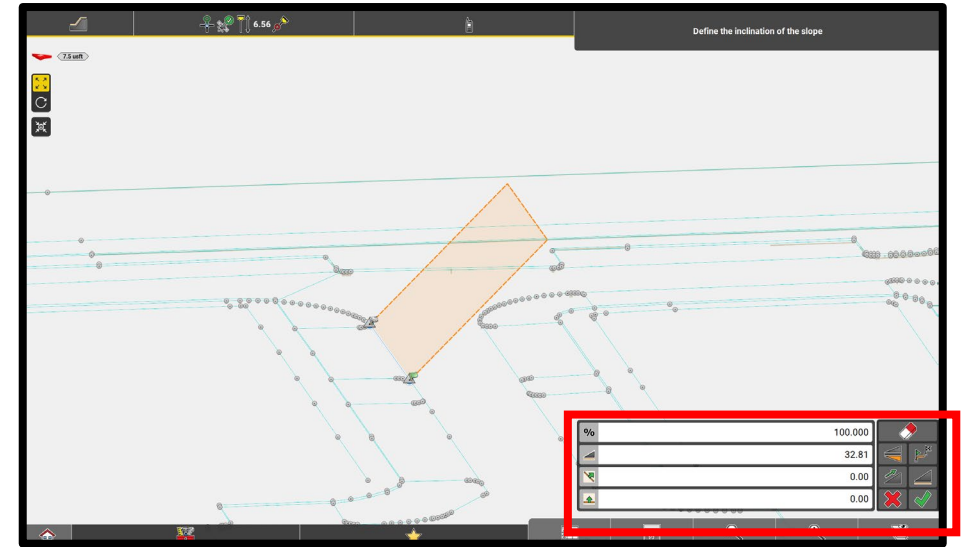- When selecting a single line, a slope appears with the default settings
- For example: a 2:1 slope 20ft wide with a 5 foot horizontal offset from the building
- Enter the desired values to update the orange surface to the desired slope



Slopes



- When Pressing  , note values change to default
- When pressing  , note slope switches to opposite side of line

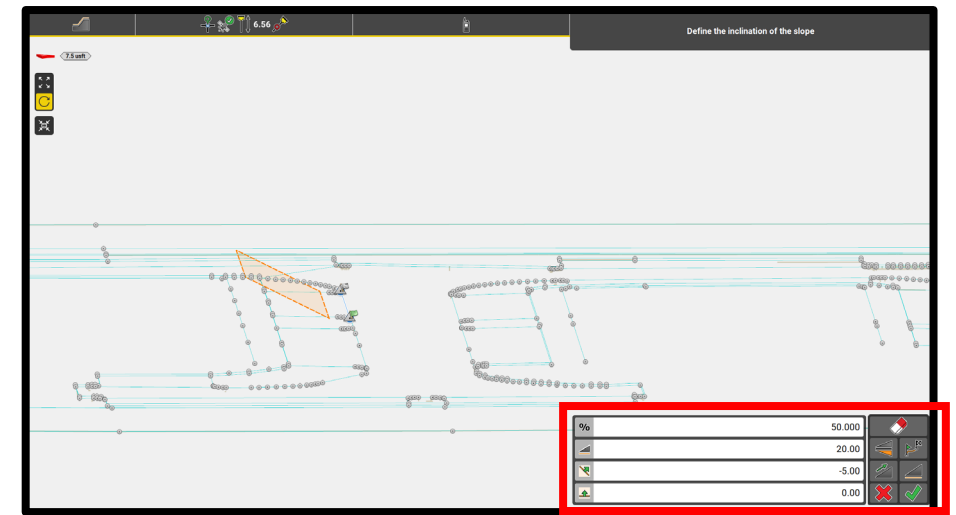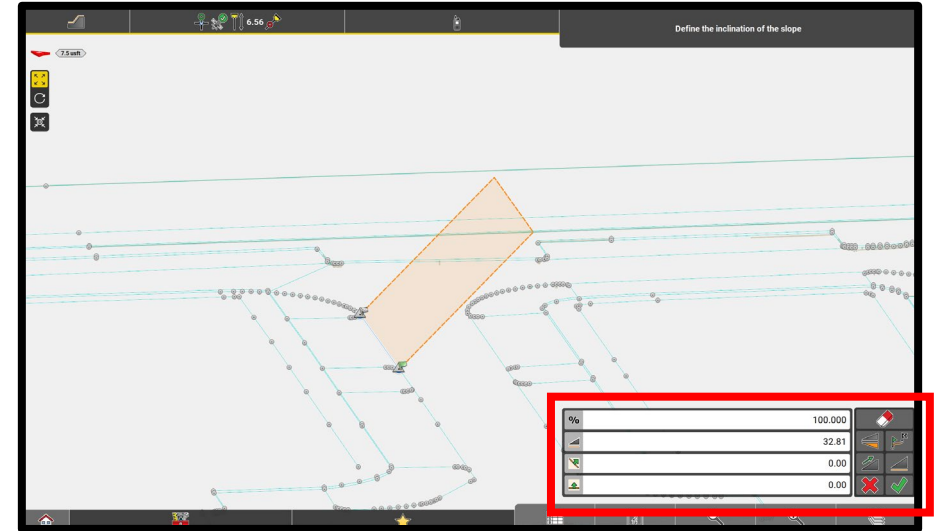



Slopes


- When Pressing  , note slope goes down instead of up

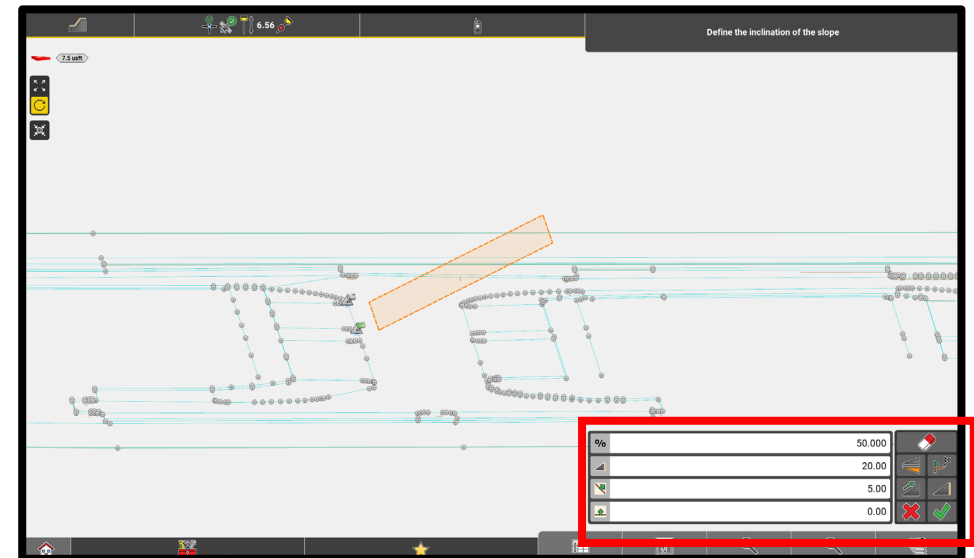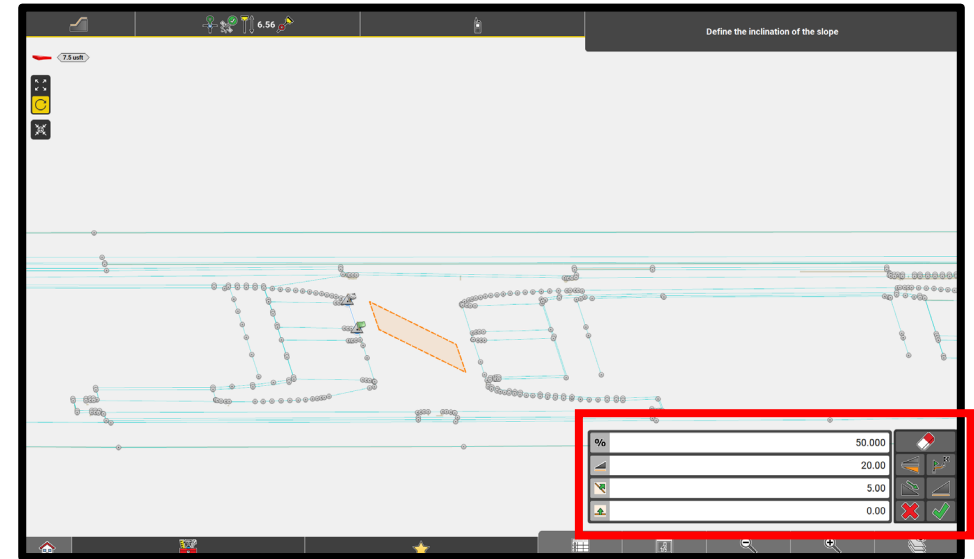- When pressing  , note distance goes vertical instead of horizontal






Slopes

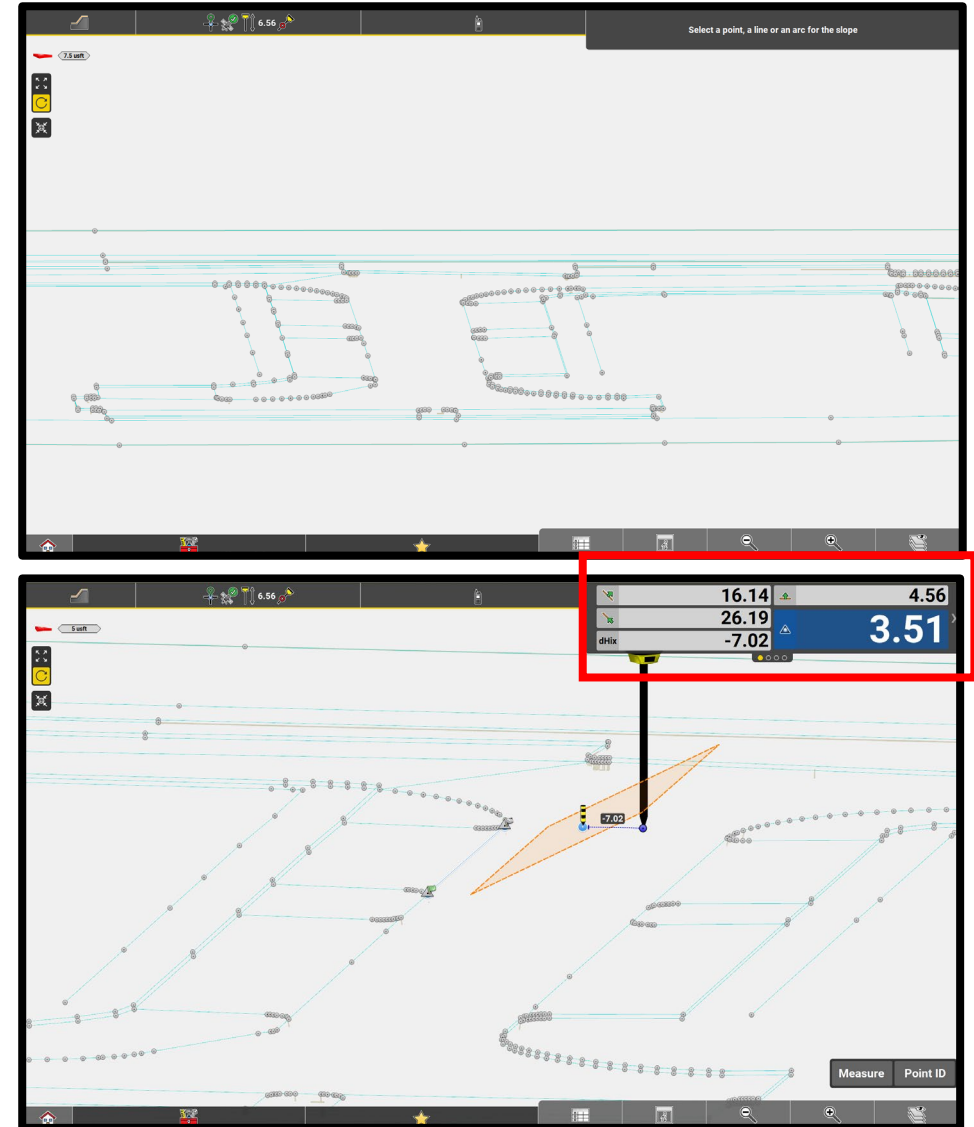- When Pressing  , exits to slope screen
- When pressing  , applies slope settings and gives cut / fill to slope surface



Slopes

- Once the slope is generated, you can then get cut/fill and distance to slope
- An alternate view can be seen from the cross-section view of the slope. Press  to bring up the menu then press 

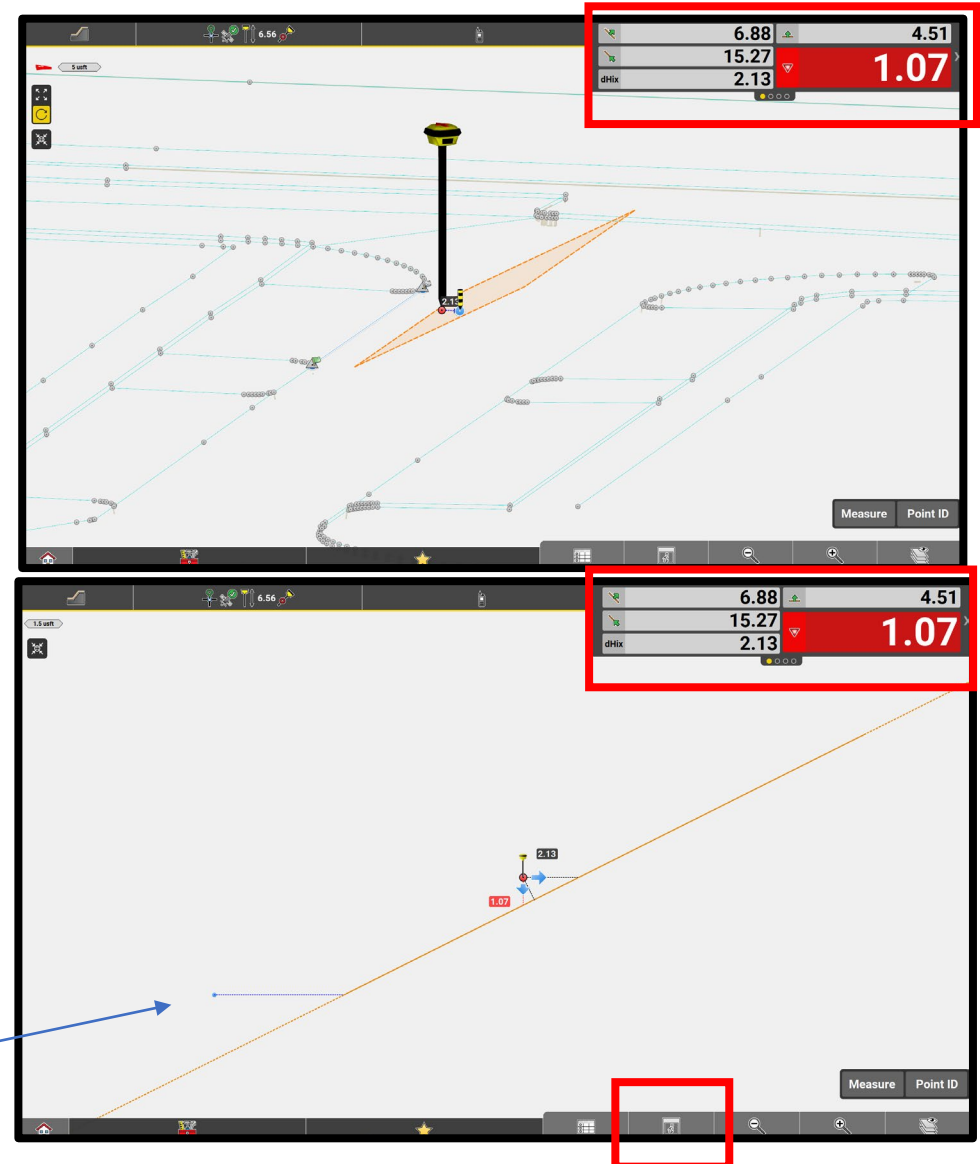

Original pad line

